


Quick Guide of Seetong Access Cloud NVR

This guide aims to show you the fastest way to surveillance device's real time video through Seetong mobile client. The contents of the manual will be updated from time to time without prior notice.

Seetong mobile client mainly through the following steps to surveillance NVR real time video.

1. NVR network configuration

Power on NVR and login in the system, in right click choose "System Setup-> Network" to config NVR Network configuration ,as shown below

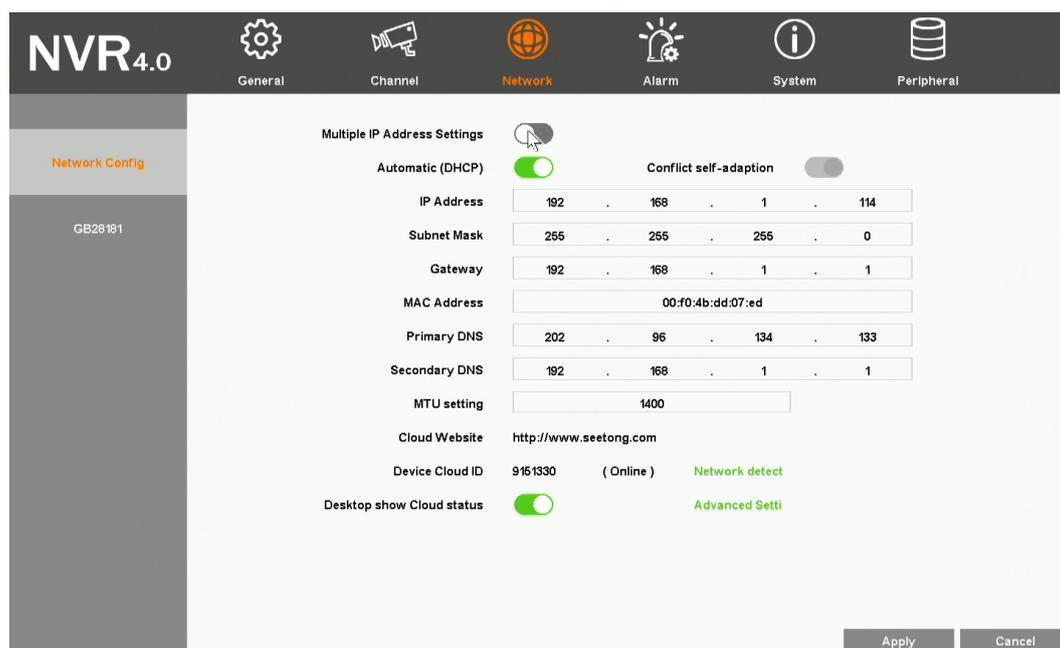

IP Address set as router's legitimate local network IP, DNS1 and DNS2 set as router's DNS1 and DNS2(WAN IP of router must support online surfing).

When NVR system starts at the first time with the access of the Internet, the status menu displays a message which says 'Inactivate: Click to activate', as the following picture shows:

Inactivate :Click to activate

You need to Left-click here to activate NVR by setting your own password to ensure your NVR is online. As the following shows:

REMARKS: Your own password can only involve letters or numbers and cannot be empty. It also cannot be set to default password '123456'

View device cloud ID and QR code


NVR configure the correct network information, the automatic registration connection cloud server, just above the NVR desktop and "System Setup-> Network" configuration can view cloud ID and state in the "System Setup-> System"configuration "information" to see cloud ID and QR code.as shown below



. [Note: if not installed app Seetong scan the QR code can download Android or IOS version SeetongAPP, installation Seetong app by adding device to scan the QRI code will automatically add this device.](#)


2. Seetong Mobile Client Access

Mobile through wifi or 4G networking then click “Seetong” to enter application. There are two ways to the user to access the IPC can implement preview for device.According to the user and device to log in,as shown

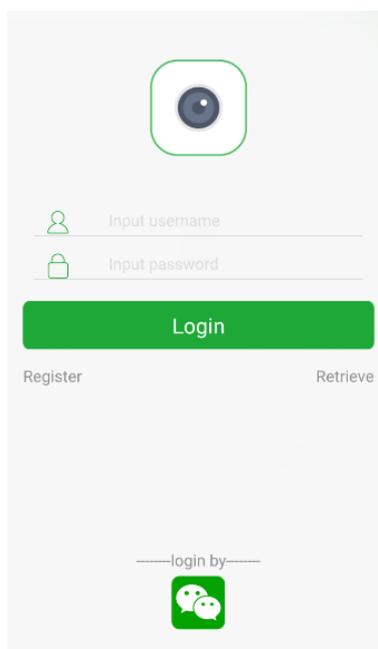

3. Cloud system user registration


Register a legitimate user can manage devices well. In the interface of “User login”, click the link of “Register”, then come out the interface as follow:

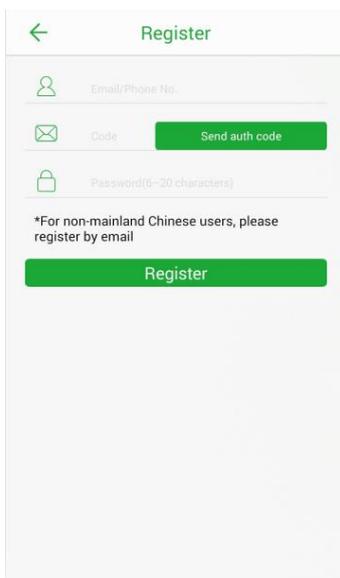


User register successfully will input username and password information in “User Login” edit box.

4. Through “User Login” to access:

Registered users have been registered after the phone number or email address and password to login.

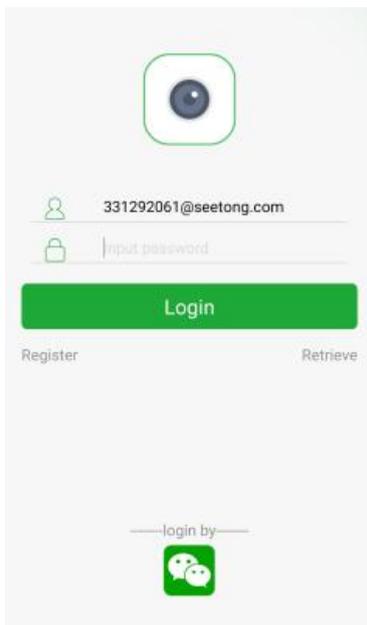


After a successful login can get all the information of the user of the device, the initial new registered users no device, devices list is empty; if it has to add device click device list can broadcast video device.

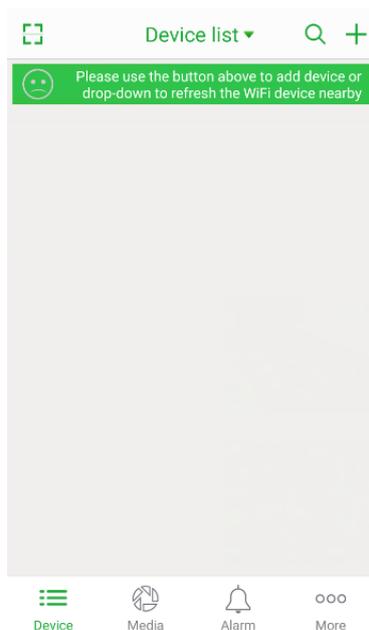


5. Add device

After a successful login, the device list page click “+” into the add device interface, management of user devices, as shown below:

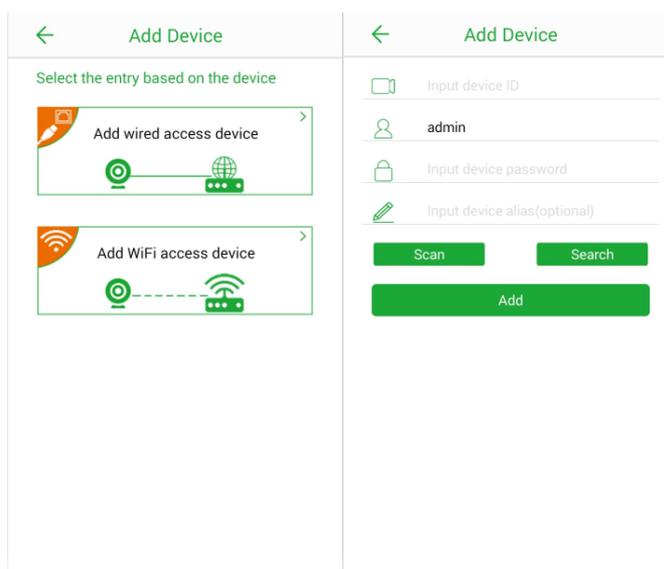


For example add device cloud ID 8734458. Username and password is device’s legitimate username and password, the default user name and password are admin, 123456, in order to devices safety please modify the device password; Automatically add or scan QR code to the device. User auto gain device’s access and manage permission after adding device.

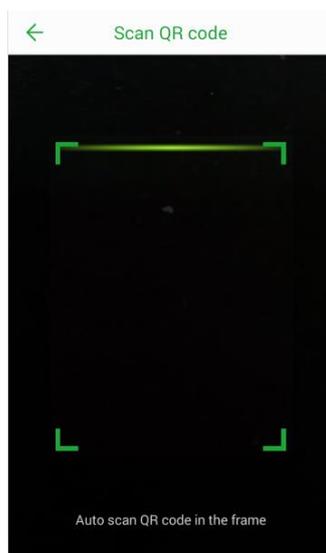

6. Device list classification:

Add the device cloud ID online and offline display, and distinguish IPC according to the larger image display, NVR device two columns according to the small figure shows, as shown below:

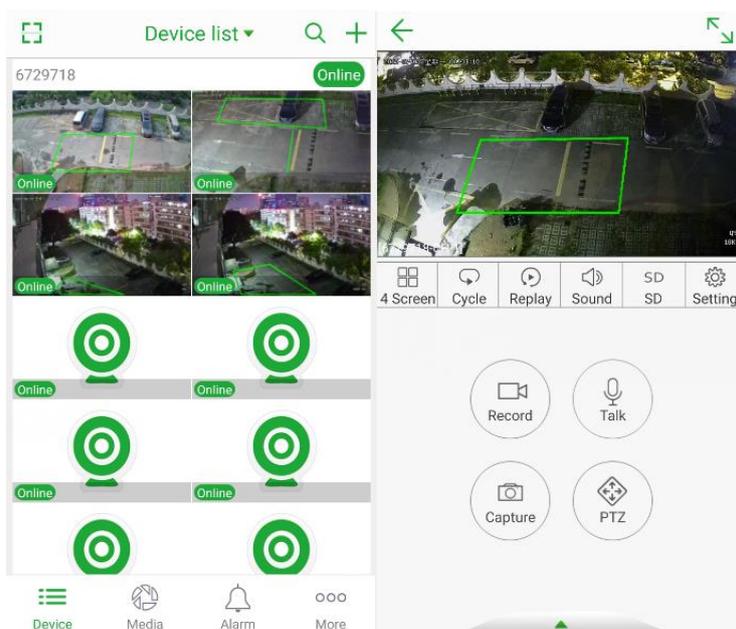

You can preview playback, click the online device in the device list capture, record and other operations.